 




ELECTRICAL

Section 2D - Wiring Diagrams

Table of Contents




210 HP Wiring Diagram	2D-2	240 HP Wiring Diagram	2D-3
-----------------------------	------	-----------------------------	------

Notes:



210 HP Wiring Diagram

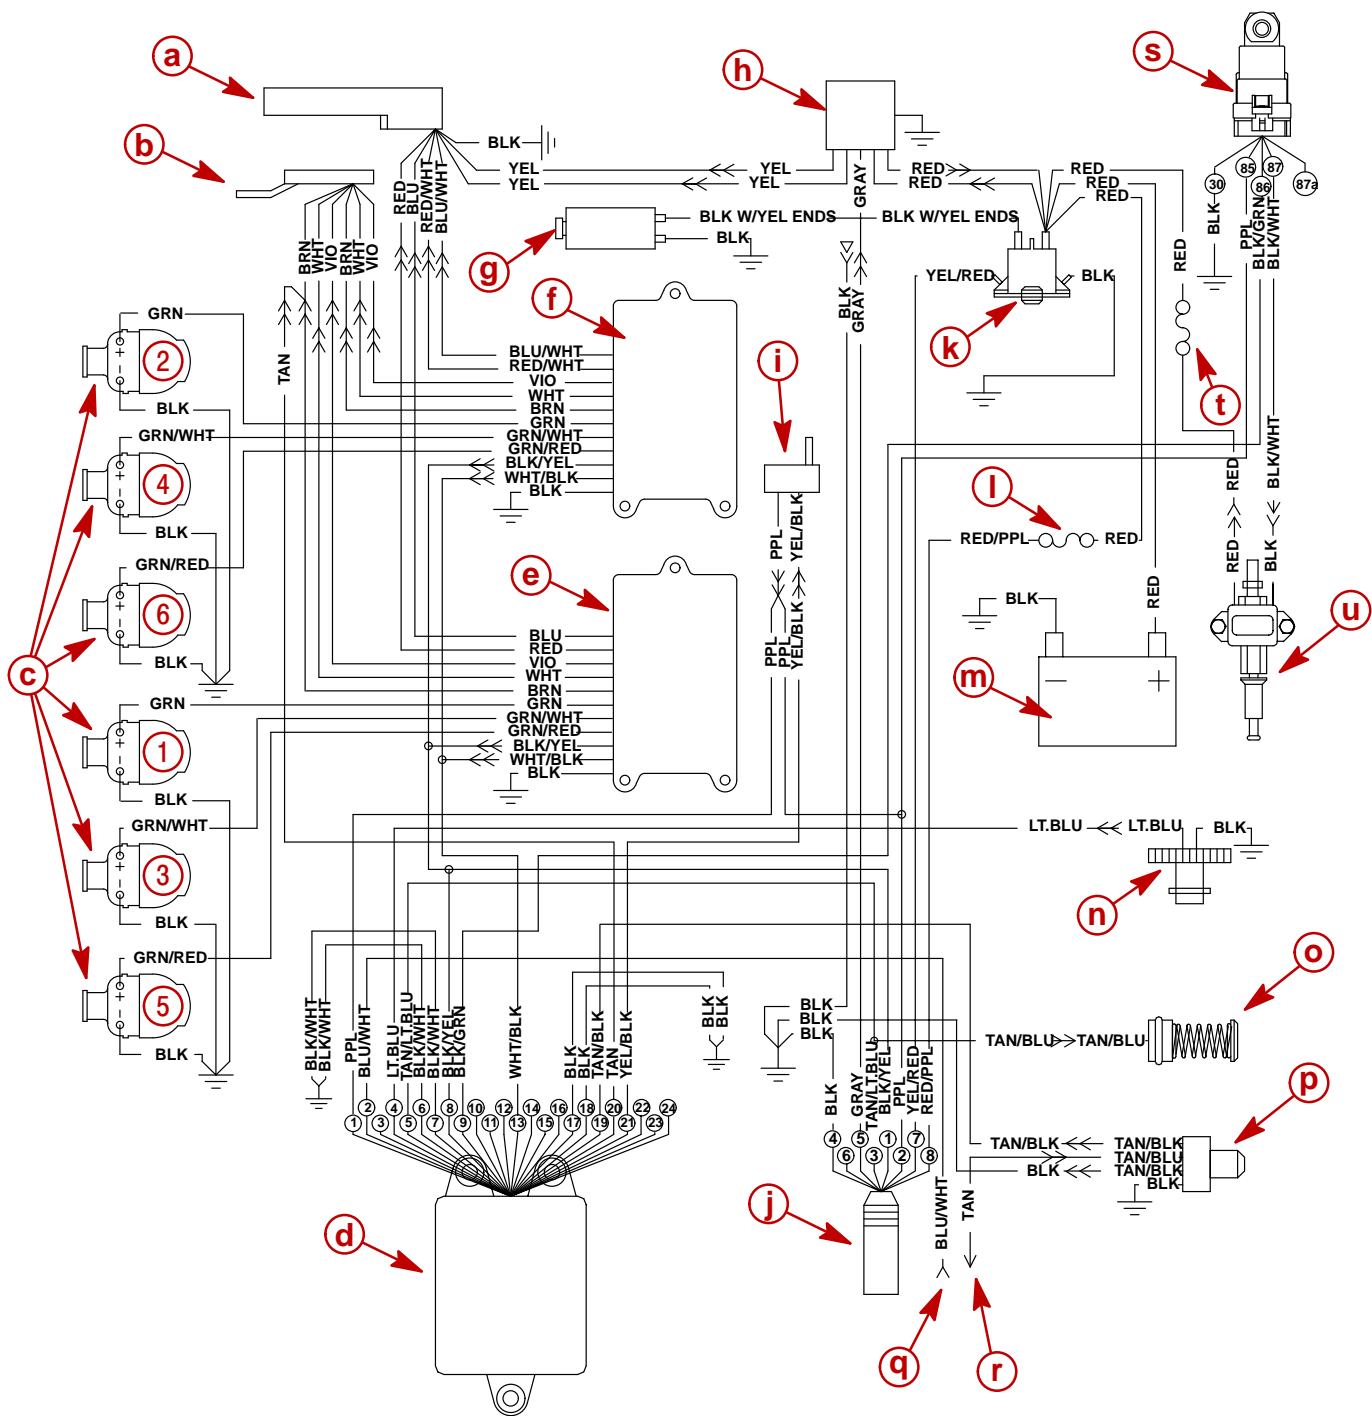

- a** - Stator
- b** - Trigger
- c** - Ignition Coils
- d** - Electronic Control Module
- e** - Inner Switch Box
- f** - Outer Switch Box
- g** - Starter
- h** - Voltage Regulator
- i** - Enrichment Solenoid
- j** - Engine Harness Plug
- k** - Starter Solenoid
- l** - 20 Amp Fuse
- m** - 12 Volt Battery
- n** - Low Oil Switch
- o** - Head Temp. Switch
- p** - Coolant Temp. Switch
- q** - To Low Oil Lamp
- r** - To Coolant Temp. Gauge
- s** - Pump Relay
- t** - 3 Amp Fuse
- u** - Fuel Primer



240 HP Wiring Diagram

- a** - Stator
- b** - Trigger
- c** - Low Oil Switch
- d** - Control Module
- e** - Temperature Switch
- f** - CDM's
- g** - To Temperature Gauge
- h** - To remote Control
- i** - Upper Voltage Regulator
- j** - Lower Voltage Regulator
- k** - Starter
- l** - 20 Amp Fuses
- m** - Start Solenoid
- n** - 12 Volt Battery
- o** - Fuel Primer Relay
- p** - Fuel Primer
- q** - Air Temperature Sensor
- r** - Head Temperature Sensor
- s** - Rev Limiter
- t** - Throttle Position Sensor
- u** - Water Sense Module
- v** - Water Sensor
- w** - Fuel Pump
- x** - Fuel Injectors
- y** - ECM
- z** - Diagnostic Connection

